

Acoustic Wall & Ceiling

Recommended Installation Guidelines

Acoustic Panel Installation Instructions




Step One

Clean the walls before mounting the acoustic panel. Please ensure that the wall surface is smooth, free of moisture, dust and dirt.



Step Two

Measure the width and length of the wall, then mark out the vertical and horizontal center lines as a guide for positioning and attaching the panel.

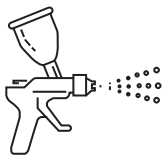

Step Three


> Using a contact adhesive.

Spray the adhesive evenly to the wall and the rear of the panel. Allow drying time of 4 - 5 minutes. Then align the rear of the panel edges to the marked vertical and horizontal center lines. Using a clean cloth or wearing gloves, and taking care to avoid trapping air, press from center of each panel outwards all over the surface to ensure a strong and perfect bond.



> Using double sided adhesive tape.

Lengths of double sided tape should be evenly spaced across or down the rear of each acoustic panel, pressing the tape firmly before removing the protective paper. Align the rear of the panel edges to the marked vertical and horizontal center lines. Using a clean cloth or wearing gloves, again press firmly from center of each panel outwards to avoid trapping air, ensuring a strong bond.

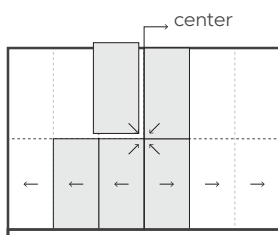

Remark

Repeat the process for each panel, pushing them firmly together, following the diagrams.

The contact adhesive and double sided adhesive tape are suitable for use on smooth surfaces.

They are not recommended for use on concrete or textured surfaces.